

PFXi Replacement of the Keypad




Disconnect from the power supply before continuing.



Remove the Right Hand Lid carefully by removing the 2x M3 x 5 pan head screws




Pull the Right Hand Lid slightly to the right, then tilt forwards to access the PCB Connectors

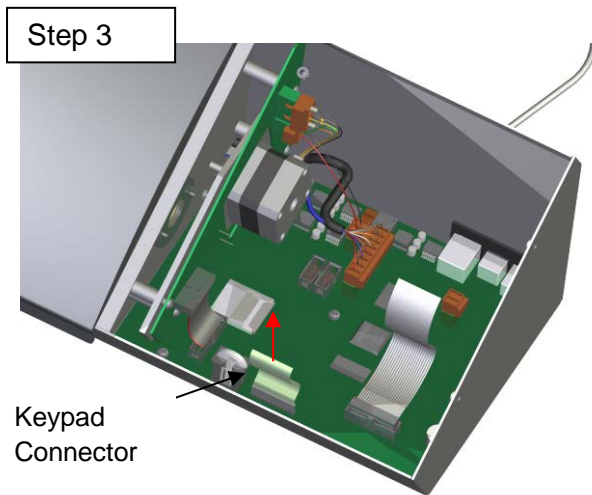

Disconnect the Keypad Connector from the Connectors on the Main Boards as shown.




Peel off the Keypad from the Right Hand Lid.
Clean away any residue adhesive from the lid.

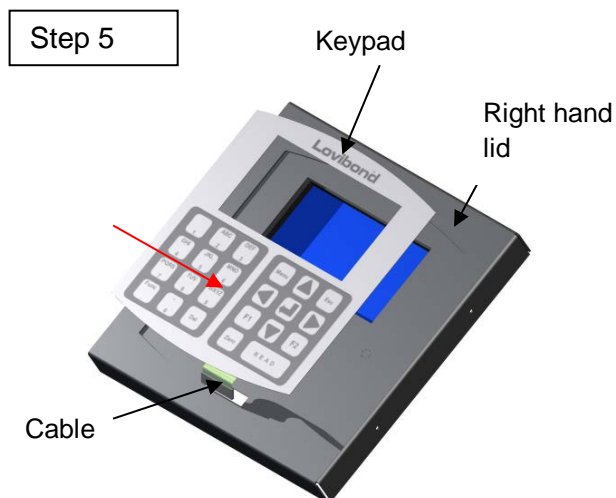

Peel the adhesive backing from the new Keypad; thread the cable through the hold in the Right Hand Lid and apply the Keypad to the lid.

Remove any air bubbles.

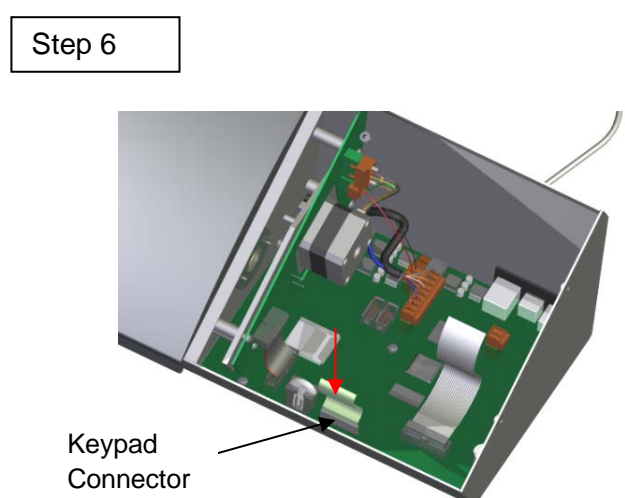

Connect the Keypad Connector to the Connector on the main PCB.

Step 7



Replace the Right Hand Lid carefully.

Step 8



Fasten the 2x M3 x 5 pan head screws.